



# ARUZ

**ELEVATE YOUR LIFE**

## **QUICK USER GUIDE**

This Quick User Guide is not designed to provide owners with comprehensive information about the ARUZ. Please refer to the Owner's Manual that comes with this vehicle for more details. All information in this guide is valid at the time of printing.

Perodua reserves the right to make changes at any time without prior notice.

# INDEX

## OVERVIEW

INSTRUMENT PANEL .....	1
INSTRUMENT CLUSTER .....	2
INTERIOR VIEW .....	4
SMART ENTRY .....	5
PUSH START/STOP BUTTON .....	7
HOOD & FUEL TANK DOOR RELEASE .....	9
ENGINE COMPARTMENT .....	10

## FEATURE/OPERATION

 
SETTING UP 'SMART LINK' FOR ANDROID .....	11
ADVANCED SAFETY ASSIST (A.S.A.) 2.0 .....	18
EMERGENCY STOP SIGNAL (ESS) .....	20
'ECO IDLE' SYSTEM .....	21
HILL-START ASSIST (HSA) .....	23
VSC & TRC SYSTEMS .....	24
WINDOW JAM PROTECTION .....	26
LIGHT, TURN SIGNALS & WIPER .....	27
SEATS .....	29
AUDIO, CLOCK .....	31
CHANGING BACKGROUND COLOUR .....	32
PAIRING A BLUETOOTH DEVICE, STEERING SWITCH, REVERSE CAMERA .....	33
AIR CONTROL SYSTEMS .....	34
REAR COOLER SYSTEM, POWER WINDOW .....	35
SIDE MIRROR REMOTE CONTROL, POWER SOCKET, USB POWER OUTLET, HDMI POWER OUTLET .....	36
GLASSES CASE, ROOF RAIL, BUILT-IN TOLL READER, DVR, SEAT POCKET .....	37

## SAFETY & EMERGENCY

SAFETY AND EMERGENCY FEATURE .....	38
------------------------------------	----


# OVERVIEW

## INSTRUMENT PANEL

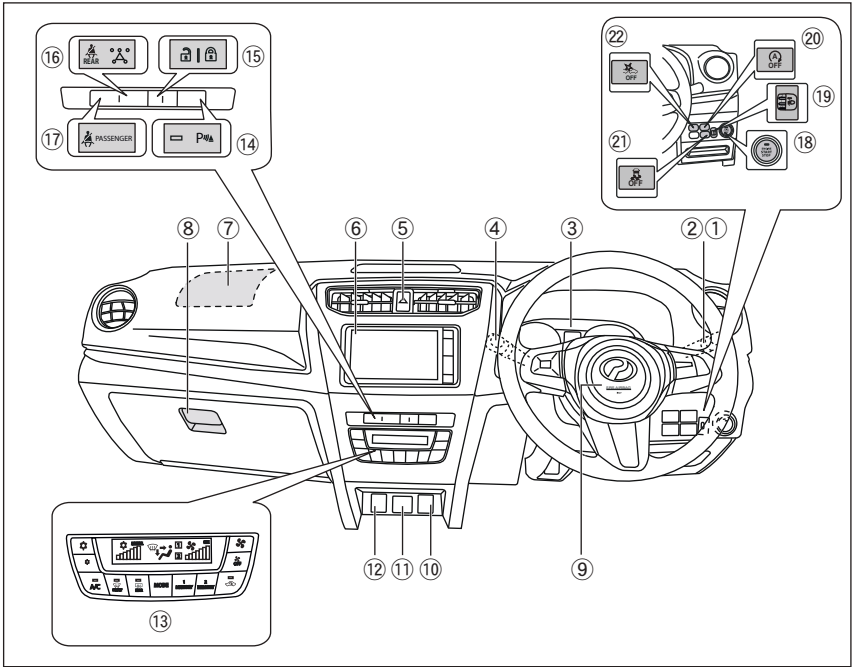

- ① Turn signal control lever
- ② Headlight control
- ③ Combination meter panel
- ④ Wiper and washer control lever
- ⑤ Hazard warning signal switch
- ⑥ Audio control panel
- ⑦ SRS air bags for front passenger
- ⑧ Glove box
- ⑨ SRS air bags for driver
- ⑩ HDMI power outlet (if equipped)
- ⑪ USB power outlet
- ⑫ Power socket
- ⑬ Air conditioner control panel
- ⑭ Front corner sensor switch
- ⑮ Central doors lock switch
- ⑯ Rear passenger seat belt indicator
- ⑰ Front passenger seat belt indicator
- ⑱ Engine start/stop button
- ⑲ Headlight levelling switch
- ⑳ Eco Idle OFF switch
- ㉑ VSC & TRC OFF switch
- ㉒ Advanced Safety Assist (A.S.A.) OFF switch

## INSTRUMENT CLUSTER

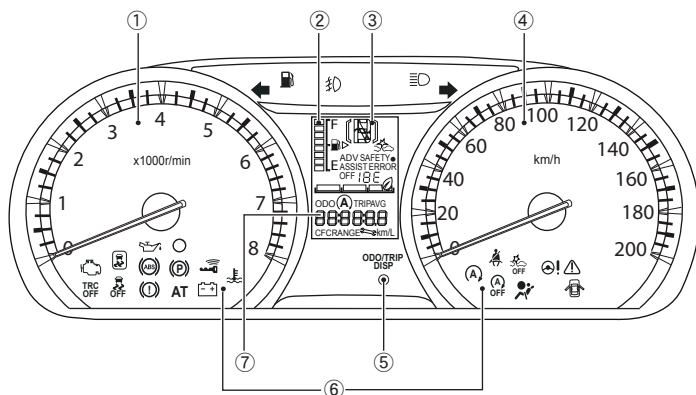 




















 
















- |                            |                                 |
|----------------------------|---------------------------------|
| ① Tachometer               | ⑤ Odometer Display Reset Button |
| ② Fuel Gauge               | ⑥ Indicator & Warning Light     |
| ③ AT Shift Indicator Light | ⑦ Multi-information Display     |
| ④ Speedometer              |                                 |

  If indicator & Warning lights do not turn off within a few seconds of starting the engine, there may be a malfunction. Have your car checked at an authorised Perodua Service Centre.

## INDICATOR SYMBOL


For details, refer to "Indicator & Warning Lights" in Section 5 Owner's Manual.

	Parking brake warning light		Door ajar warning light
	Brake warning light		Low fuel level warning light
	Oil pressure warning light		Water temperature warning light
	Battery charge warning light		Malfunction indicator light (MIL)
	Air bag warning light		ABS (Anti-lock Braking System) warning light

	Security indicator light		Power steering warning light
	Eco bar indicator light		Key-free warning light
	Service information reminder indicator		Seat belt warning light (Rear passenger)
	VSC OFF indicator light		A.S.A. OFF indicator light (if equipped)
	TRC OFF indicator light		A.S.A. operation indicator (if equipped)
	Slip indicator light		Seat belt warning light (Driver)
	Eco Idle ready indicator light		AT warning light
	Eco Idle OFF indicator light		Automatic transmission shift indicator light
	Multi information display		High beam indicator light
	Speedometer		Tail light-on indicator light
	Master warning light (if equipped)		Tachometer
	Front fog light-on indicator light (if equipped)		Advance Safety Assist (A.S.A.) error warning light (if equipped)
	Turn signal / Hazard warning signal indicator light		Advance Safety Assist (A.S.A.) OFF warning light (if equipped)

If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have the system checked by an authorised Perodua Service Centre.

## INTERIOR VIEW

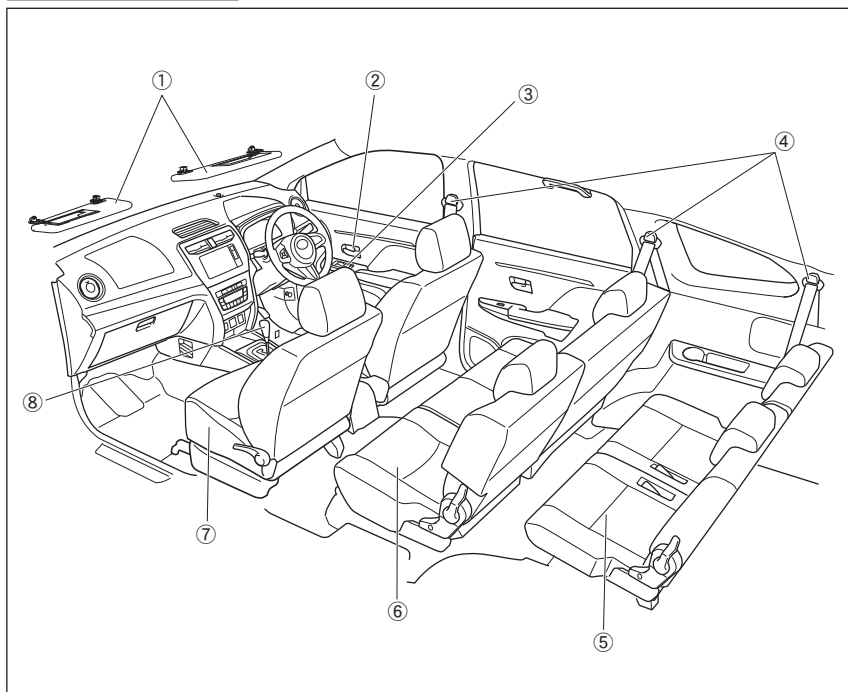 


- ① Sun Visor
- ② Door lock / unlock switch
- ③ Power window switch
- ④ Seat belt

- ⑤ Third row seat
- ⑥ Second row seat
- ⑦ Front seat
- ⑧ Shift lever


## SMART ENTRY
 
### LOCKING OPERATION

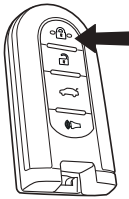


 : Press once to lock

### UNLOCKING OPERATION

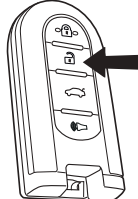 

 :  
Press once :  
Unlock driver door  
Press twice :  
Unlock all doors

### BOOT UNLOCKING OPERATION

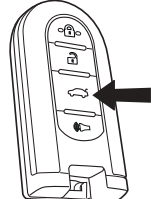 

 : Press once to unlock

## PANIC ALARM BUTTON

 
 


Press and hold

To stop alarm, press button  ,  or  .

The alarm will sound for 45 seconds if any of these buttons are not pressed.


## EMERGENCY KEY

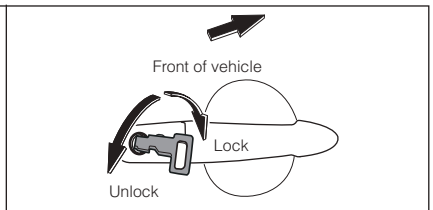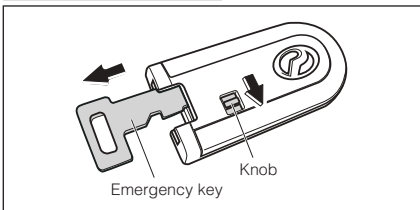


Push the knob downwards to release the emergency key.

Use the emergency key if the Smart Key battery is weak or if the Smart Entry function does not operate properly.

## LOCK / UNLOCK DOORS

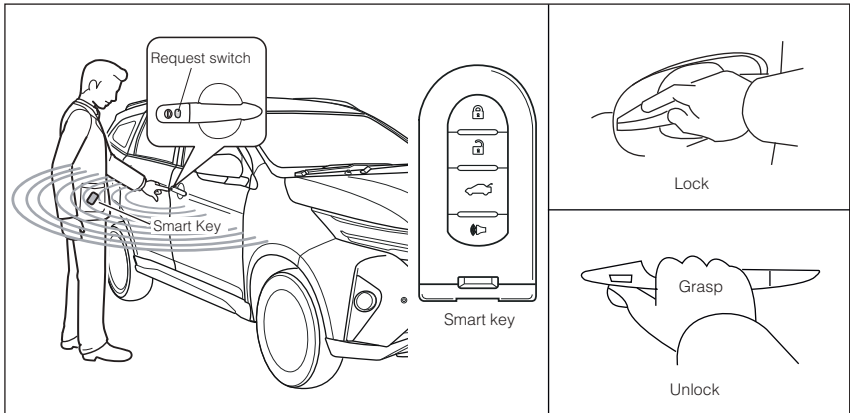 

## UNLOCK BACK DOOR

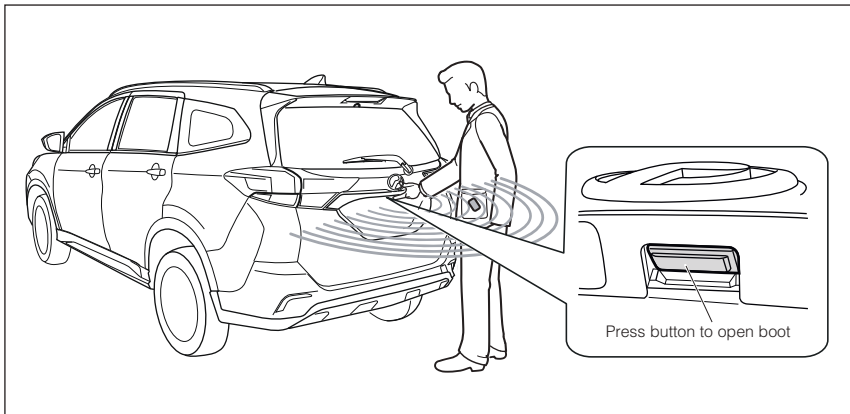 


Operating range may vary by surrounding conditions.

- (i) Key-free: Within 3 metres from centre of vehicle.
- (ii) Request switch: When the smart key is within approximately 80cm from outer door handle.




## PUSH START/STOP BUTTON

 
### PUSH START SYSTEM

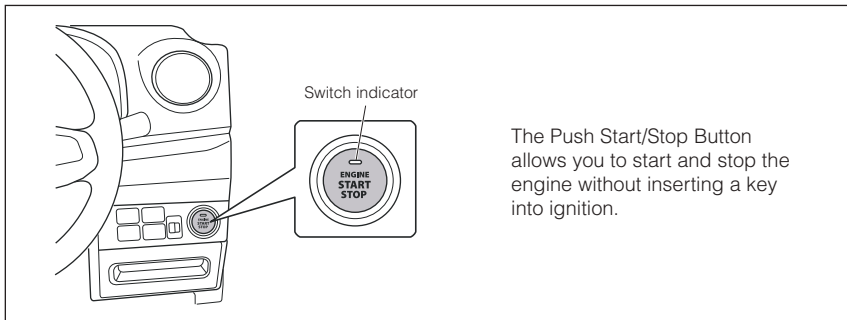


### TO START ENGINE

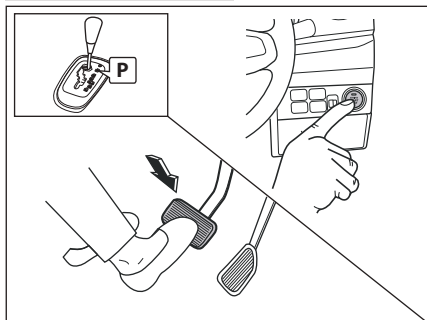 

### TO STOP ENGINE

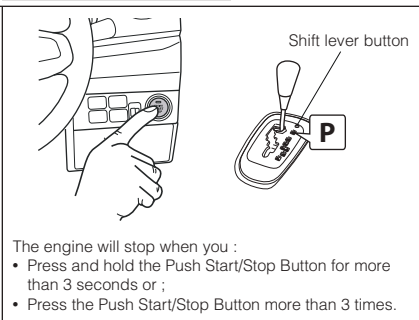 


### TO CHANGE ENGINE IGNITION MODE

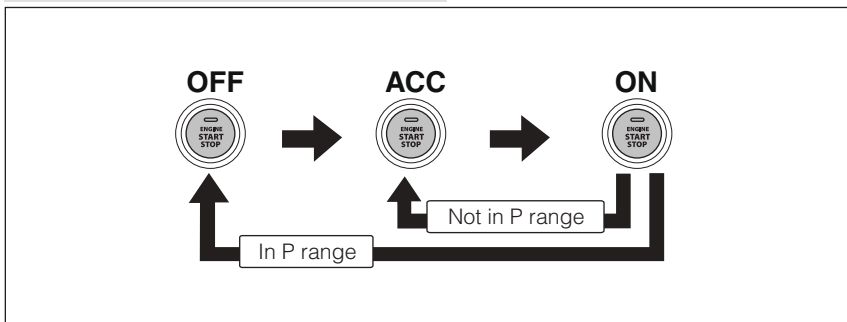 


When brake pedal is not depressed, pressing the Push Start/Stop Button will change the engine mode.

## SWITCHING ENGINE ON WHEN SMART KEY BATTERY IS WEAK

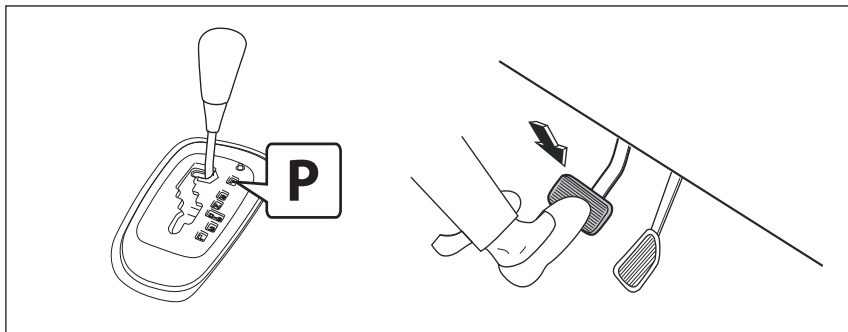 

 ① Move the gear shift to 'P' while depressing the brake pedal.

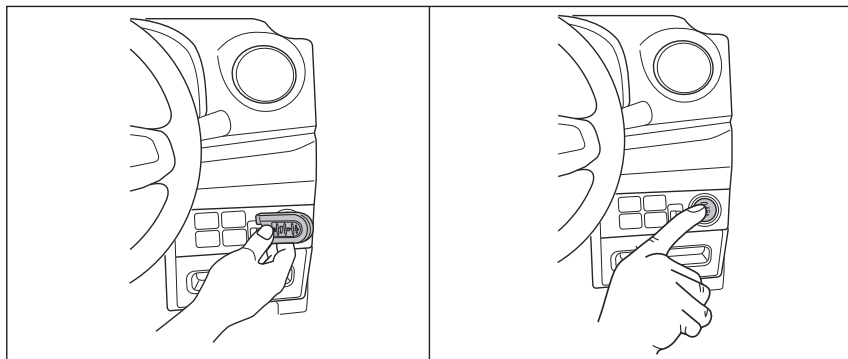


② Touch the Push Start/Stop Button with Smart Key until the buzzer sounds and the engine switch indicator turn green.


③ Push the Push Start/Stop Button within 4 seconds after the buzzer sounds and the engine switch indicator turns green.

## HOOD & FUEL TANK DOOR RELEASE

 
### HOOD RELEASE

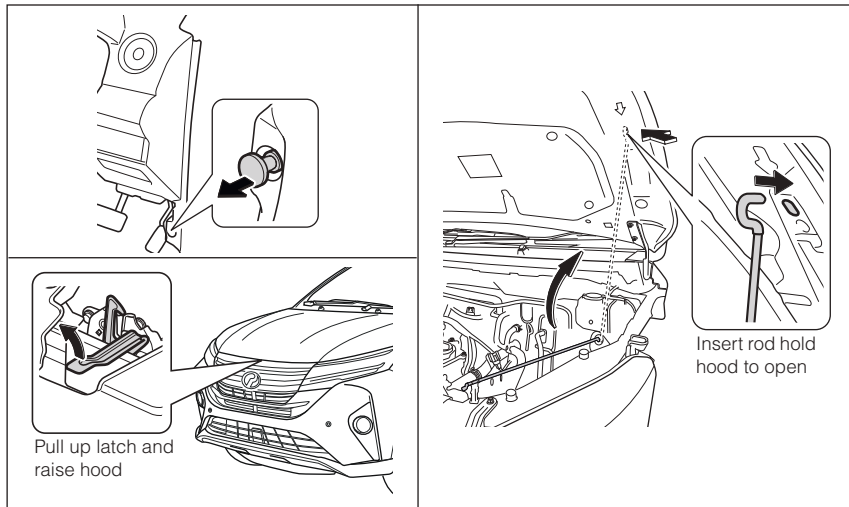

### FUEL TANK DOOR RELEASE AND CAP OPENING

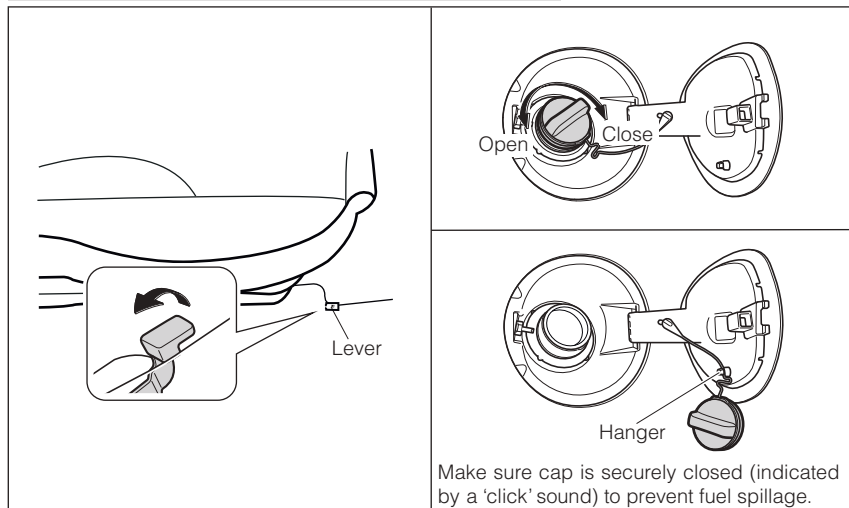 

## ENGINE COMPARTMENT

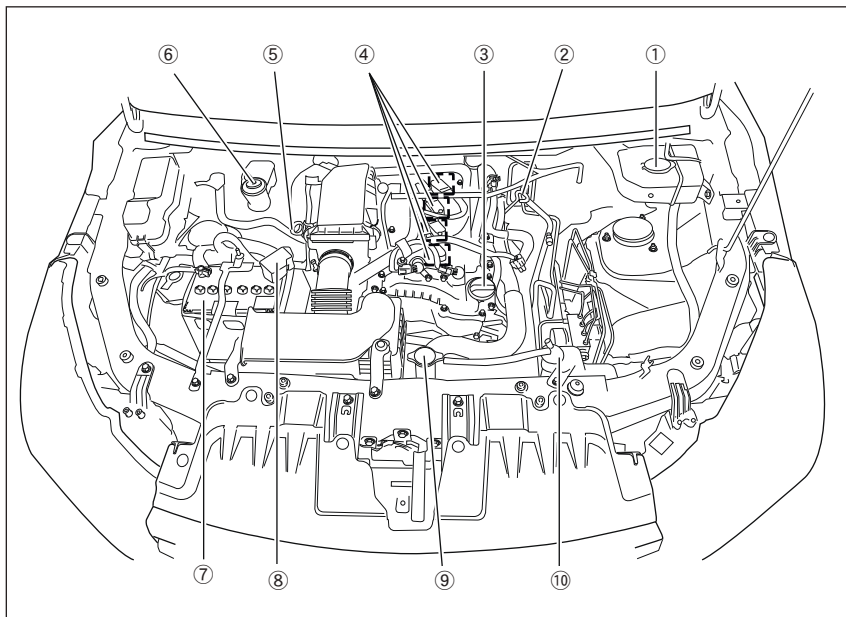 


- |  |                               |
|--|-------------------------------|
| ① Windshield washer fluid tanks          | ⑥ Brake fluid reserve tank    |
| ② Automatic transmission oil level gauge | ⑦ Battery                     |
| ③ Engine oil filter cap                  | ⑧ Fusible link                |
| ④ Spark plug                             | ⑨ Radiator cap                |
| ⑤ Engine oil level gauge                 | ⑩ Engine coolant reserve tank |

Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the maintenance schedule in section 13 of the Owner's Manual.

## SETTING UP 'SMART LINK' FOR ANDROID (IF EQUIPPED)
 
### CONNECT TO THE SMART PHONE


① Activate Bluetooth on your Android device and pair it with the Multimedia System to enable 'Smart Link' Audio\*

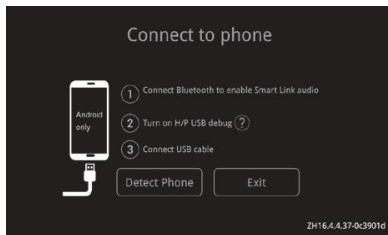

### TURN ON H/P USB DEBUG

② 'Smart Link' connection requires you to enable 'Developer Options'. If your device does not have 'Developer Options' enabled, follow the steps below.

 
- Go to 'Settings'
- Go to 'About Phone' (or 'About Device')
- Tap 'Build Number' 7 times to enable 'Developer Options'.

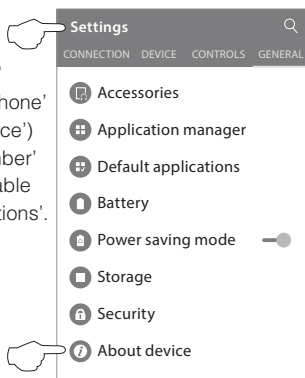


\*Please refer to Bluetooth pairing manual for more details.

- ③ A 'USB Debugging' screen will appear.  
Follow the instructions listed on the screen.

 - a. Go to 'Developer Options'.
- b. Enable 'Developer Options'.
- b. Check or enable 'USB Debugging'.

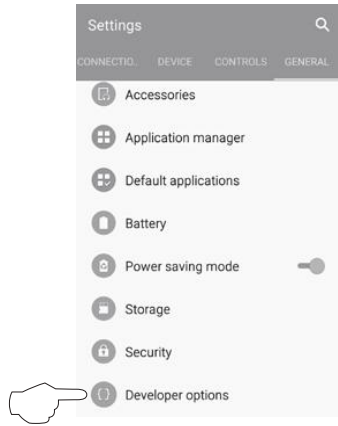

 - ④ Allow 'USB Debugging' on your Android device when window pops up on smartphone.

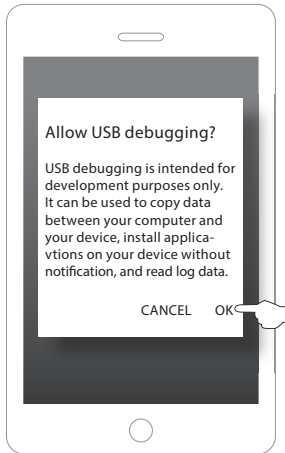

Your device may have a different way of enabling 'Developer Options'. Please refer to your device's user manual for more details.

## CONNECT USB CABLE

- ⑤ Connect USB cable to the USB port. Enter 'Smart Link' mode by touching the 'Smart Link' button.



- ⑥ Touch 'Detect Phone' on Audio Navigation. On the Android device, allow for USB Debugging.

 
 


## 'DRIVE MODE' APP INSTALLATION

- ⑦ The Drive Mode app will be automatically downloaded and installed to your Android device. Once download is complete, Smart Link control menu will be shown on audio display.



Open the Drive Mode app to enter the 'Smart Link' control menu. 'Smart Link' is now ready for use.

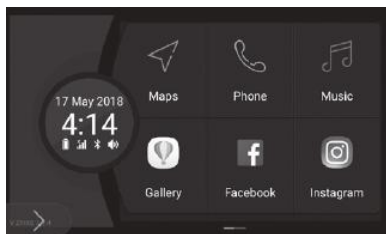
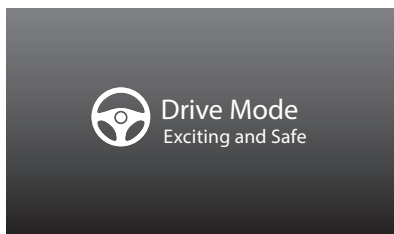


- Steps 1 to 7 only need to be done once for each Android device, for first time users only.
- 'Smart Link' only works with Android OS 4.0 and above.
- 'Smart Link' does not support iOS.
- The Drive Mode app installation requires at least 50MB of storage space on your Android device.
- 'Drive Mode' App does not contain viruses. You may receive an alert from your device's antivirus software during its first installation. Select "yes" if confirmation of installation is required.
- Use only original USB cables.
- Performance may vary according to device specifications.



## 'SMARTLINK' NAVIGATION

 
 
Touch **[Navigation]** on the 'Smart Link' control menu to access Google Maps or Waze applications.

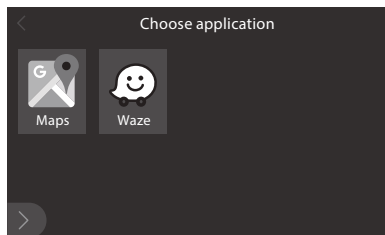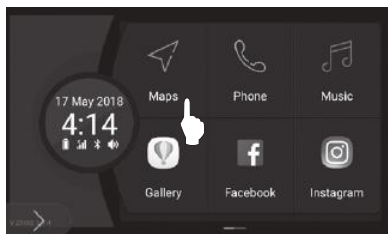

Select the desired map application by tapping on the icon.

## 'SMARTLINK' TELEPHONE

  Touch **[Telephone]** on the 'Smart Link' control menu to make a phone call.

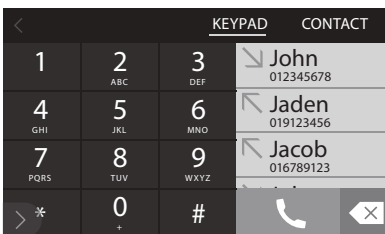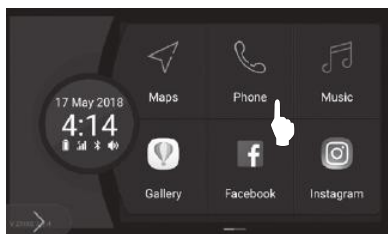



Dial the desired phone number using the keypad, then touch [  ].

OR

Touch **[Contact]** to enter the Phone Book. Touch the desired contact number.

## 'SMART LINK' MUSIC

  Touch **[Music]** on the 'Smart Link' control menu to play music from your Android device.

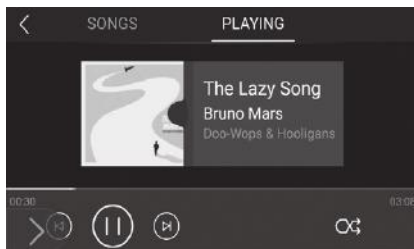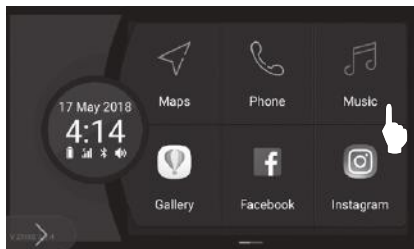

Playing music functions:

[ ⏸ ] Pause

[ ▶ ] Play

[ ⏭ ] Skip forward

[ ⏮ ] Skip backward

[ ↺ ] Repeat playlist


[ ↻ ] Repeat current song

[ 🔀 ] Random play

Touch **[Song]** to display song list.

Select the desired song.

## ADDITIONAL 'SMART LINK' APP

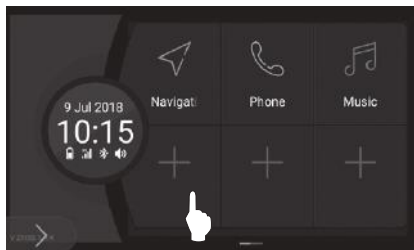 

- Touch [ + ] on the 'Smart Link' control menu to add an application from your Android device.
- Select the desired application from the application list.
- The added application icon will overwrite the [ + ].

A total of 15 applications can be added to the 'Smart Link' control menu, but only Map, Phone & Music Apps function during driving.



## REMOVING 'SMARTLINK' APP

- Touch and hold the application icon until [ ⊖ ] appears.
- Touch the [ ⊖ ] to remove the application.

 
## POTRAIT AND LANSCAPE DISPLAY SELECTION

- Touch and hold the desired application icon until [ 📱 ] appears.
- Touch [ 📱 ] to select portrait or landscape display.
  - 📱 dim : Portrait Display
  - 📱 light : Landscape Display

## OTHER CONTROL FUNCTIONS



Touch [ ▶ ] to display the Control Function bar.

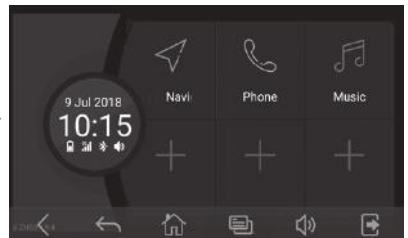

Control Functions :


- [ ◀ ] Close Control Functions bar
- [ ↶ ] Back to previous screen
- [ 🏠 ] Go to home screen
- [ 📁 ] Go to main menu
- [ 🔊 ] Control volume
- [ 🚪 ] Quit 'Smart Link'

- 'Smart Link' videos play at a frame rate of 15 to 20 FPS.
- 'Drive Mode' App does not contain viruses. You may receive an alert from your device's antivirus software during its first installation. Select "yes" if confirmation of installation is required.

## ADVANCED SAFETY ASSIST (A.S.A.) 2.0 (IF EQUIPPED)

 
A.S.A. is a system designed to support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

### STEREO CAMERA

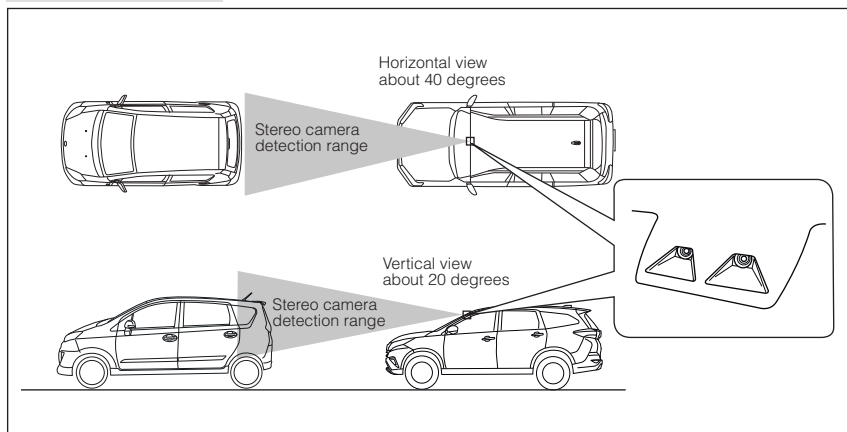

- i) A stereo camera mounted in front of the inside rear view mirror which detect vehicle up to about 60m (pedestrian up to 30m) in front.
- ii) The stereo camera will not operate properly if the wind shield view in front of the camera is obstructed by something, dirt, foggy, sticker etc.


### A.S.A. OFF SWITCH

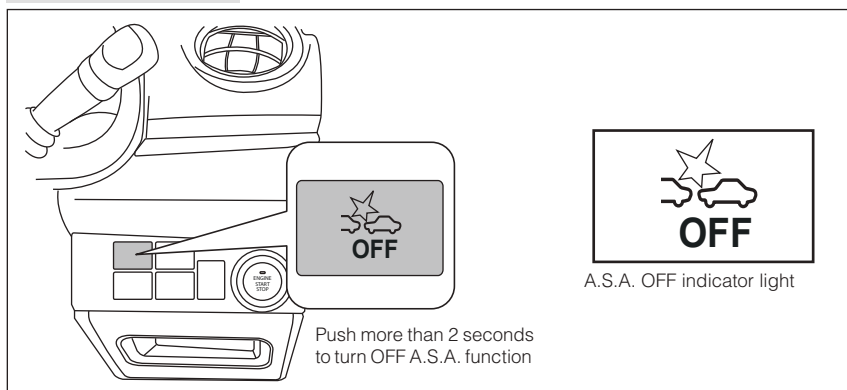 

A.S.A. OFF indicator light will illuminate at the meter panel. Every time you start the engine by the engine switch operation, A.S.A. function will return to ready state.


## ① PRE-COLLISION WARNING

 Alert the driver when it detects a risk of frontal collision.

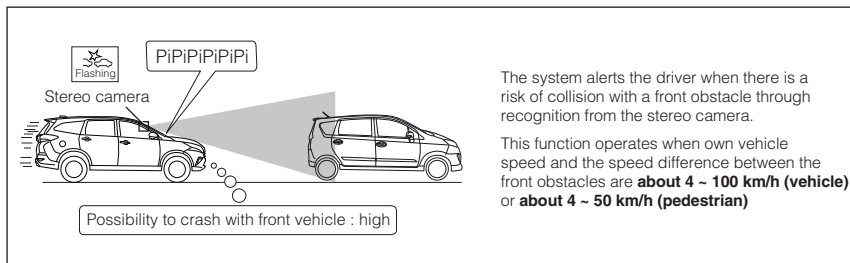

## ② PRE-COLLISION BRAKING

 
Apply brakes to avoid the collision or mitigate damage.

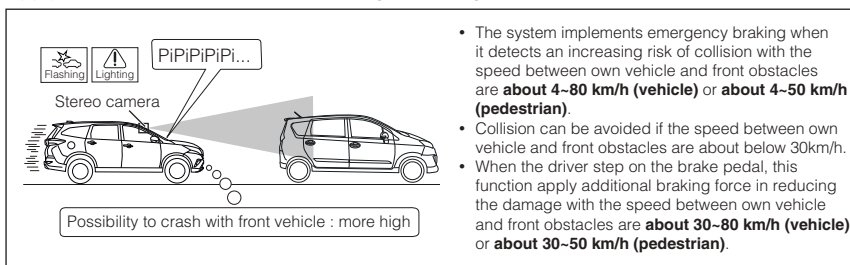

- Driver should instantly press the brake pedal to continue stop condition because the vehicle will slowly starts moving after about 1.5 seconds.
- Pre-collision braking will be disabled after the secondary brake has been activated 3 times. It will reset when engine restarts.

## ③ PEDAL MISOPERATION CONTROL

 
Suppresses engine output when the driver accidentally stomps the accelerator pedal.

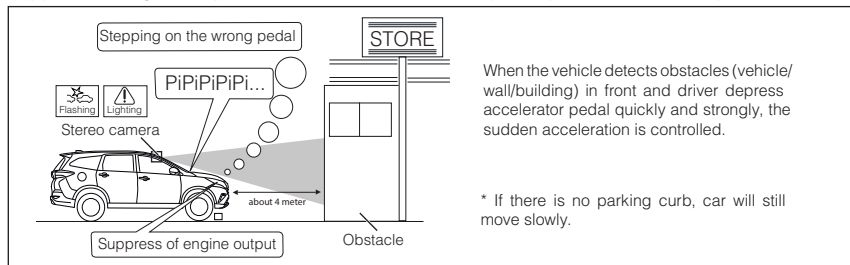

If the depression of accelerator pedal is strong but quick at under 4 km/h, only warning is operated.

#### ④ FRONT DEPARTURE ALERT

 
Alerts the driver when the vehicle in front has moved.

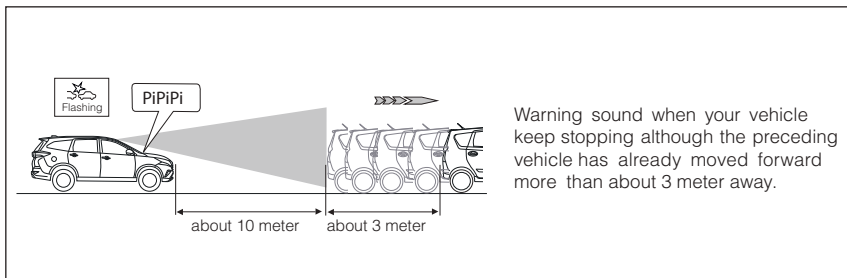

Shift position is other than **P** & **R** and distance between the stopped preceding vehicle and own vehicles is within about 10 meter.

#### EMERGENCY STOP SIGNAL (ESS)

 Emergency stop signal (ESS) is a function to reduce the rear - end collision by lashes the hazard warning signal light turn on when sudden braking applied, to warn the vehicle that follows.

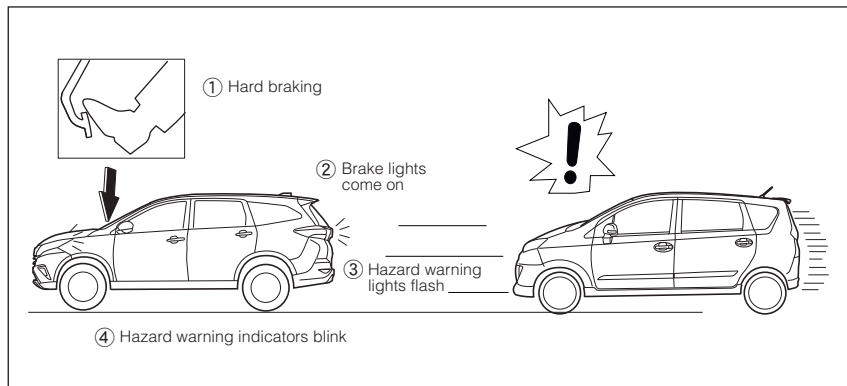

ESS operates under this condition :



- Hazard warning signal light is OFF.
- Vehicle speed is about more than 60 km/h.
- The system detect any "hard" or "sudden braking" or ABS is activated.

Driver is obliged for a safe driving and avoid unnecessary sudden braking.

## 'ECO IDLE' SYSTEM




  The 'Eco Idle' system automatically shuts down the engine when the vehicle is idle and restarts it when the vehicle returns to motion, improving fuel consumption, reducing emissions and minimising idling noise.

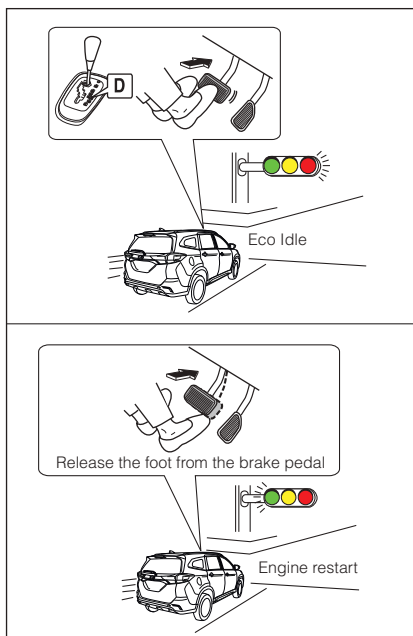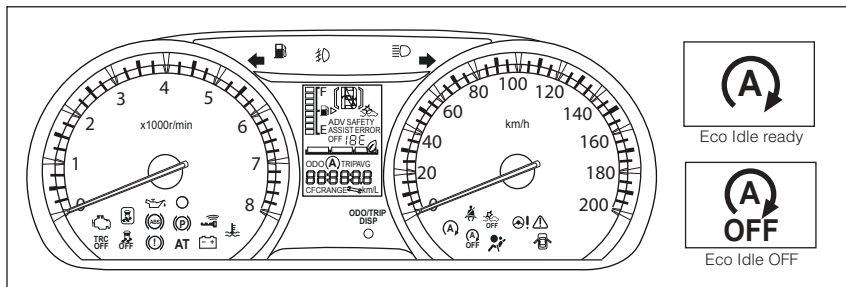

- ① When conditions for 'Eco Idle' mode are fulfilled during driving, the 'Eco Idle' ready indicator turns on in green (standby state).
- ② While the gear shift is in **D**, depress the brake pedal and stop your vehicle for 'Eco Idle' mode. The indicator will remain on in green during 'Eco Idle' mode.
- ③ The engine restarts when foot is released from the brake pedal. The 'Eco Idle' ready indicator will turn off.
- ④ The 'Eco Idle' ready indicator turn on in green again after conditions for 'Eco Idle' mode are fulfilled.

 'Eco Idle' may not operate normally under the following conditions. Have the vehicle checked by an authorized Perodua Service Centre.

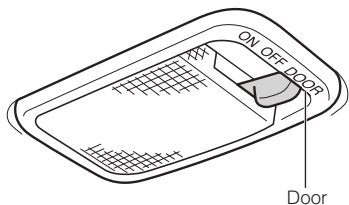

The interior light turns on when the driver's door is closed and does not turn on when the driver's door is opened.



Door ajar warning light turns on when the driver's door is closed and does not turn on when the driver's door is opened.




Seat belt reminder light flashes when driver's seatbelt is fastened, and/or does not flash when driver's seat belt is not fastened.




## HILL - START ASSIST (HSA)

 
Hill-start Assist (HSA) helps to prevent the vehicle from rolling back when starting up again from a stopped position on an incline.

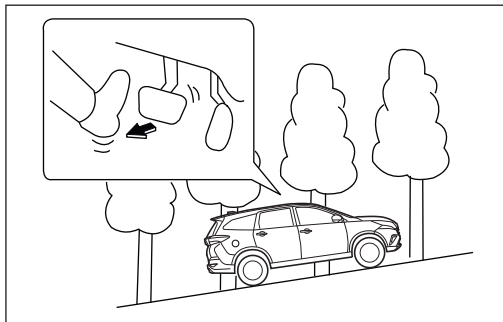

- ① Release the brake pedal slowly.

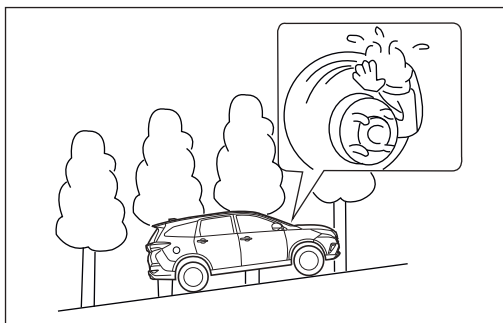 

 - ② Vehicle retains brake force for 2 seconds.

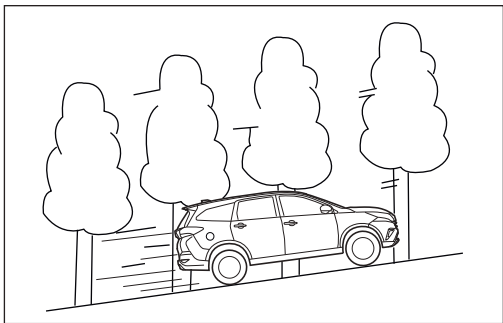

- ③ Accelerate to continue driving.

## VSC & TRC SYSTEMS

 
### Vehicle Stability Control (VSC)

Keeps the vehicle stable during sudden turns or on slippery roads.


### Traction Control (TRC)

Assists with keeping the stability of the vehicle when accelerating on slippery roads.

### VSC & TRC OPERATION

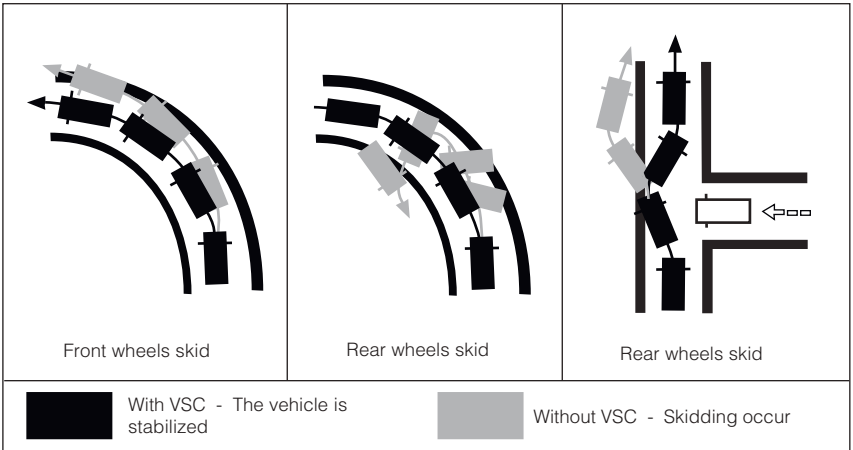


 - These situations may arise depending on road, tyre and weather conditions.
- The vehicle is more secure if it is equipped with ABS (Anti-lock Bracking System) & EBD (Electronic Brake force Disribution.)

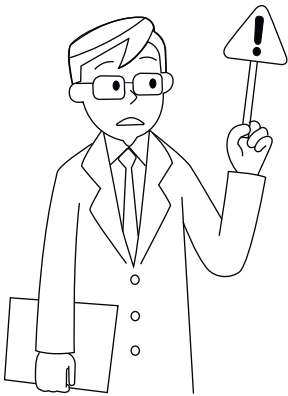

**IMPORTANT:**

 Even when VSC & TRC are operation, there are limits to the systems' traction and stability control. Dangerous driving may still cause accidents.

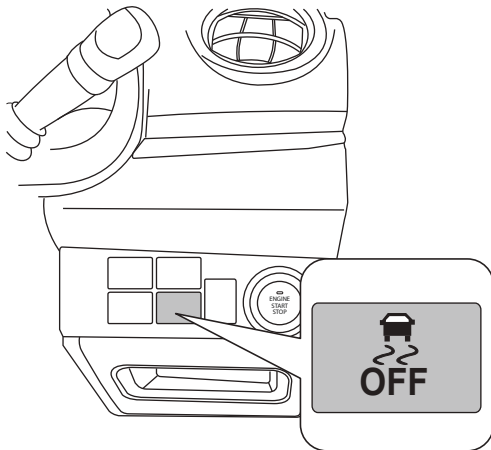

Pressing



switches VSC off



illuminates

Pressing and holding



switches VSC & TRC off

**TRC OFF** and 

illuminates


If there is an error,



illuminates

## WINDOW JAM PROTECTION


 
The Window Jam Protection function is an auto-reverse safety feature. The window will stop rising when closing if the sensor detects an obstruction between the glass and window frame.

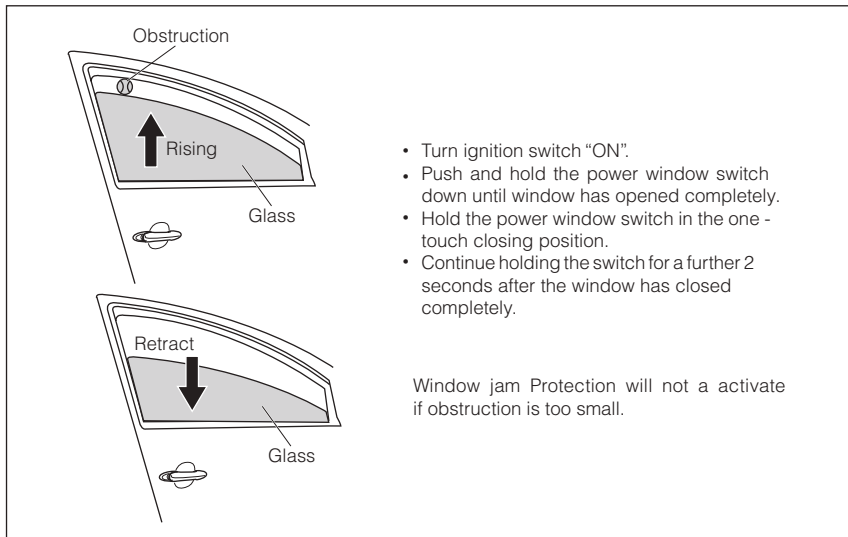

## LIGHTS, TURN SIGNALS & WIPER

### HIGH BEAM & HEADLIGHT FLASH

  
### FOG LIGHT SWITCH (IF EQUIPPED)

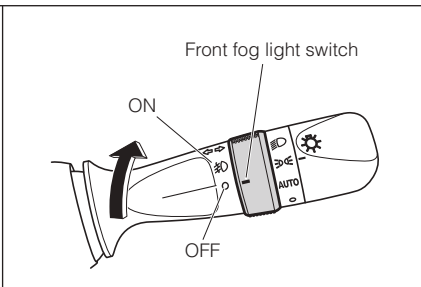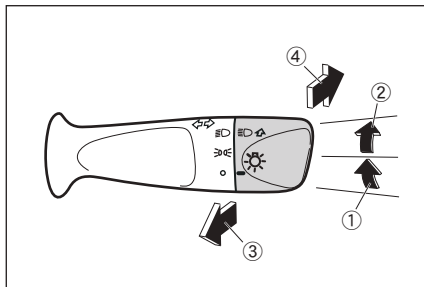


- ① Clearance lights
- ② Headlights
- ③ Headlight flasher
- ④ High beam

### TURN SIGNAL CONTROL LEVER
 
### FOLLOW ME HOME FUNCTION

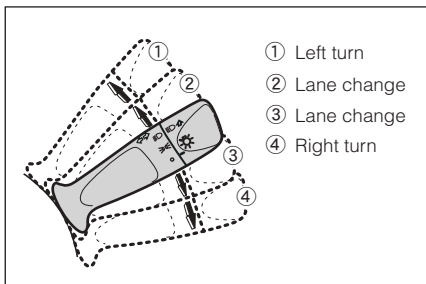


 - ① Left turn
- ② Lane change
- ③ Lane change
- ④ Right turn

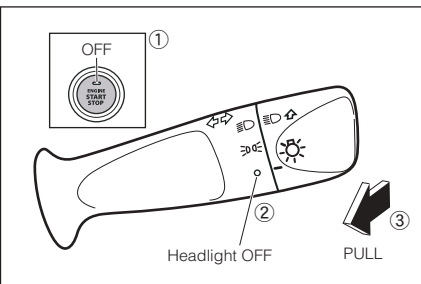


Headlight will turn "ON" for 30 seconds before it will automatically turn "OFF".

### HEADLIGHT LEVELLING SWITCH

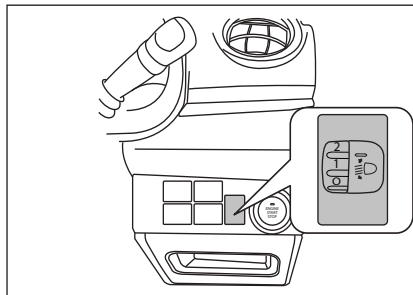 


Rotate the dial up & down to change the direction.

## AUTO LIGHT FUNCTION (IF EQUIPPED)

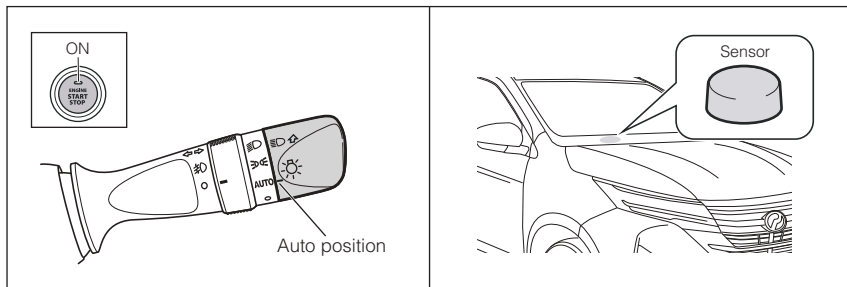 


- The headlight turn on when the auto light sensor sense dark condition.
- Do not shield the sensor as the function may not operate properly.

## AUTO LIGHT OFF FUNCTION

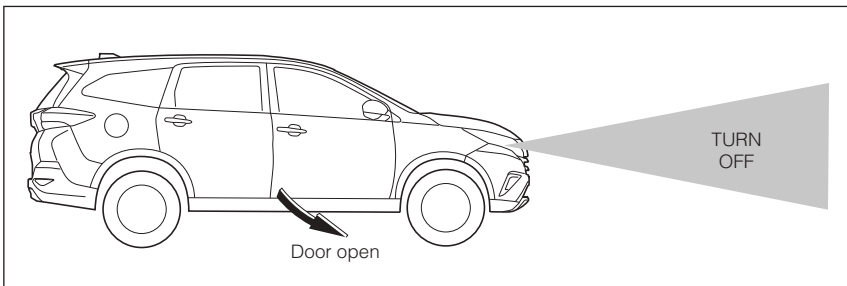 

The headlights are automatically turned off if the driver's door opened after the engine switch is turned to "OFF" or "ACC" or after 10 minutes when the engine switch is in "OFF" position and the driver's door is remain closed.


## WINDSHIELD WIPER AND WASHER LEVER

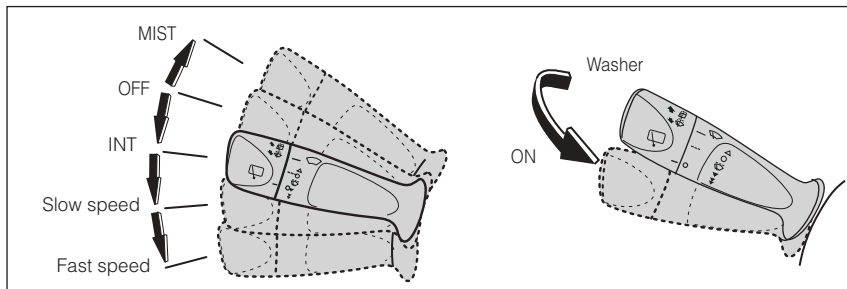 

During intermittent (INT) operation, the interval becomes shorter as the driving speed rises.


## SEATS
 
### SEAT ADJUSTMENT

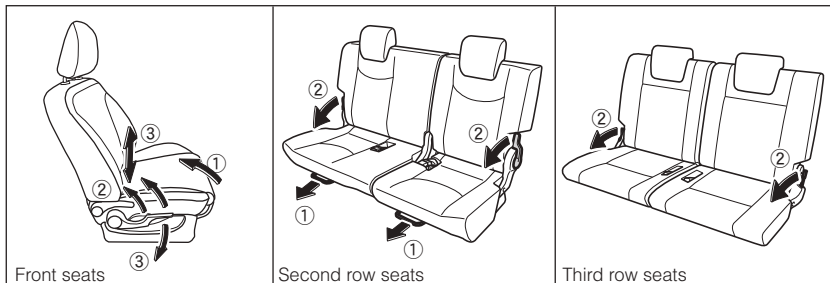


- ① Seat position (forward/backward)
- ② Seat back angle
- ③ Seat height adjuster (driver's side only)

### FOLDING SECOND SEAT

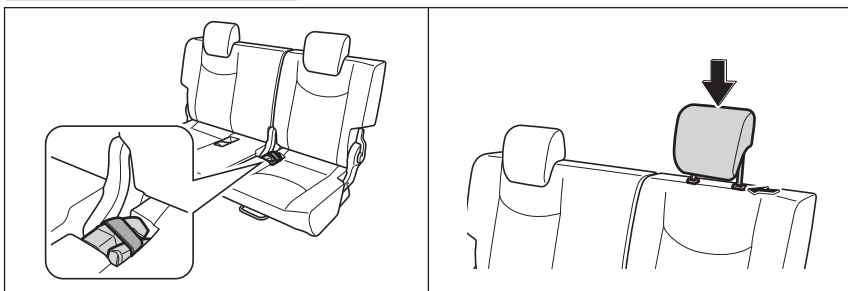 


 - ① Stow the seat belt buckles
- ② Lower the head restraint

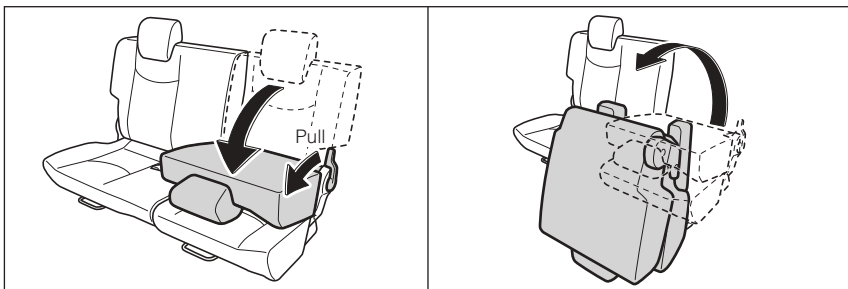


- ③ Fold the seatback down
- ④ Swing the whole seat up and forward


## FOLDING THIRD SEAT

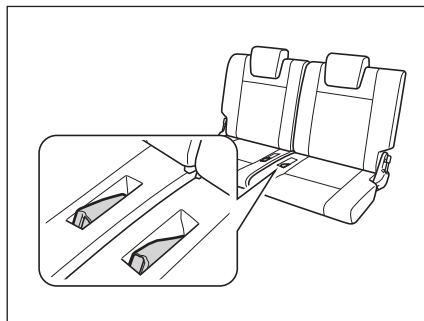 


① Stow the seat belt buckles

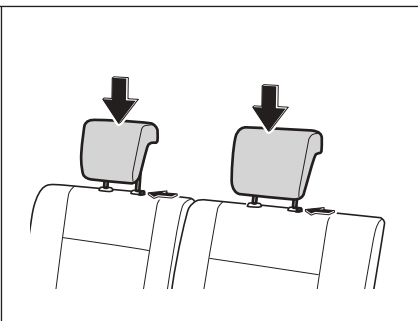 


② Lower the head restraint

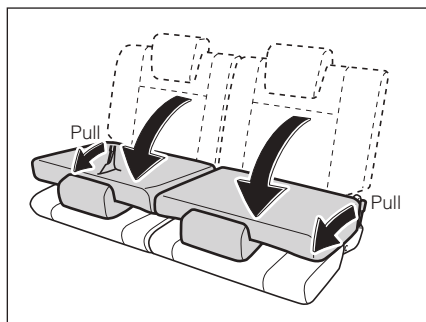 


③ Fold the seatback down

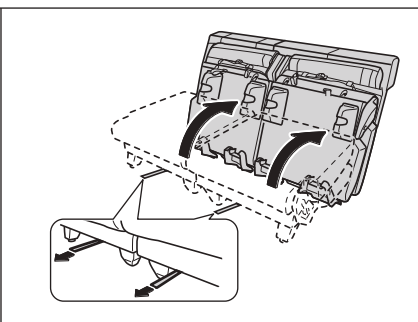 

④ Swing the whole seat up and forward

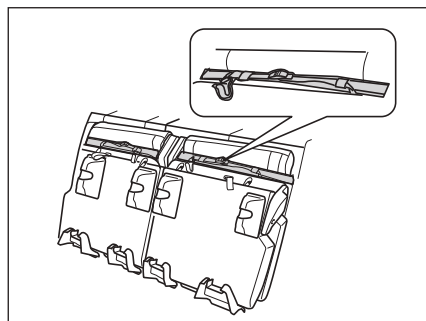 


⑤ Take out the hook from the strap

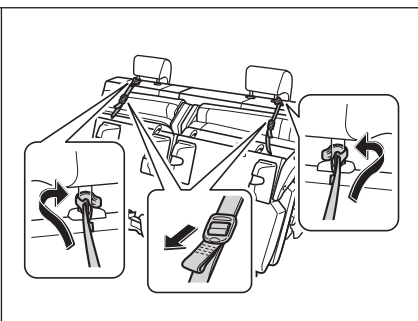 


⑥ Hook the holding strap to the head restraint




## HEAD RESTRAINTS

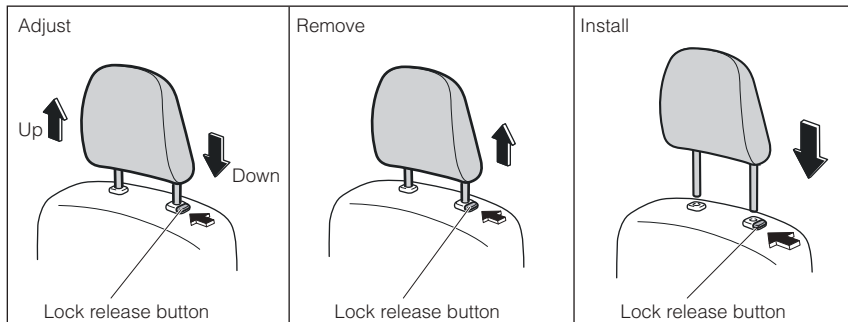 

## AUDIO

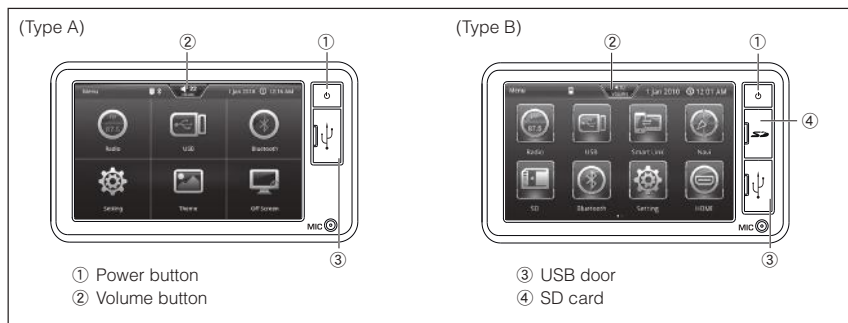 

## CLOCK

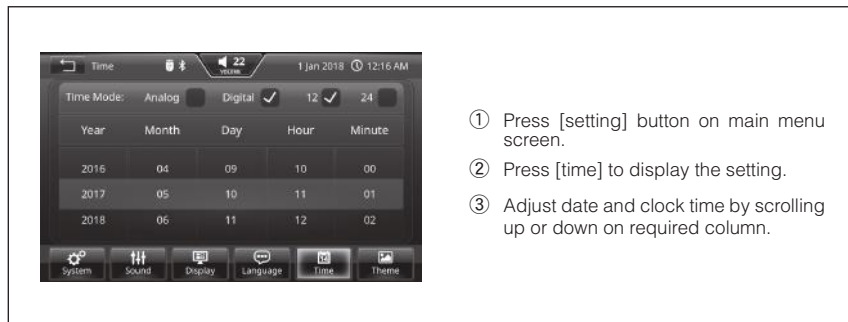 

\* For details, refer to "Audio System" in section 7 owner's manual

## CHANGING BACKGROUND COLOUR

① Touch [Setting] button on Main Menu Screen to set various setting functions.

 
(Type A)




(Type B)



② Background – Select and touch desired colour. The selected background colour will also be applied to the navigation user interface.

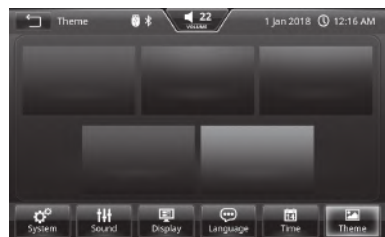

## PAIRING A BLUETOOTH DEVICE

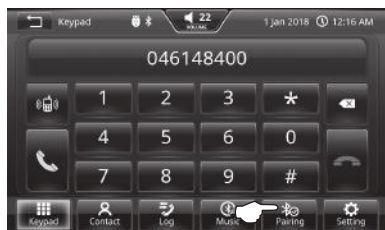 


\*\* Do not attempt bluetooth pairing driving \*\*

- 1) Press [Bluetooth] button on main menu screen.
- 2) Press [pairing].
- 3) Search new device in bluetooth mode using your phone until you found "PERODUA".
- 4) Audio System default name is "PERODUA" and passkey is 6-digit similar on both mobile phone and audio system.
- 5) LCD will display "CONNECTED" and " \*".
- 6) New bluetooth system enters into stanby mode and ready to use.



\*A maximum of 8 devices can be paired to the system.

## STEERING SWITCH

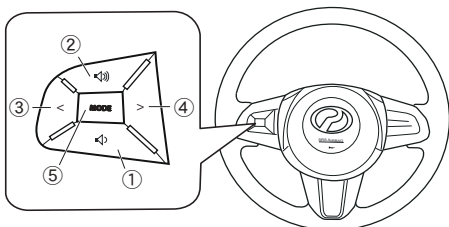 

- ① Volume down button
- ② Volume up button
- ③ Tune down button
- ④ Tune up button
- ⑤ Mode button


## REVERSE CAMERA

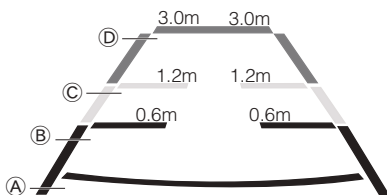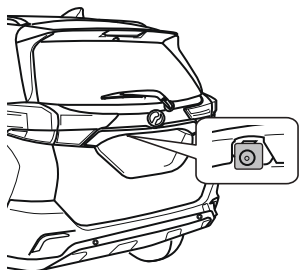  


- |                   |          |
|-------------------|----------|
| Ⓐ Bumper red line | Ⓒ Yellow |
| Ⓑ Red             | Ⓓ Green  |


## AIR CONTROL SYSTEMS

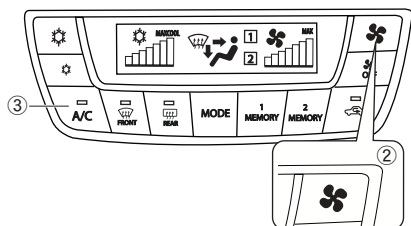 


### TURN ON THE AIR CONDITIONER



 
- ① Ignition switch on
- ② Press 
- ③ Press A/C

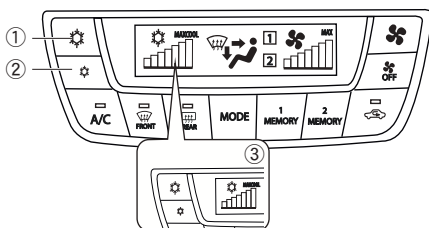


### TEMPERATURE CONTROL

 

 
- ① Press  to increase level
- ② Press  to decrease level
- ③ MAXCOOL will appear after pressing  to the maximum/end
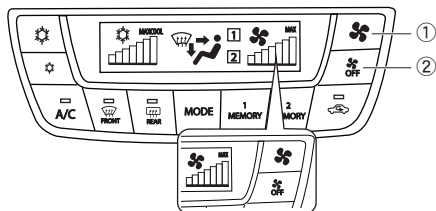
### BLOWER FAN SWITCH





- ① Press  to increase level
- ② Press  to decrease level
- ③ Press  until no level display of LCD to turn off the blower

## SET MEMORY

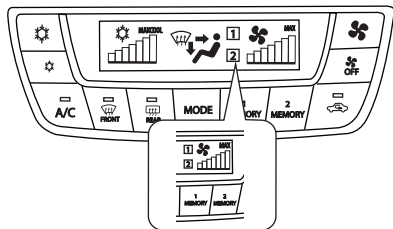 


- ① Set preferred setting of air conditioner by pressing **1** or **MEMORY** button.
- ② To replace a memory, hold either button for 1.5 second.

## REAR COOLER SYSTEM

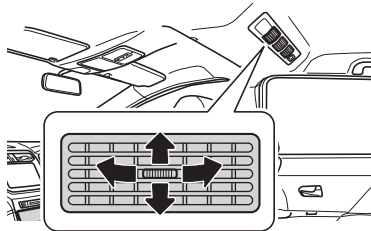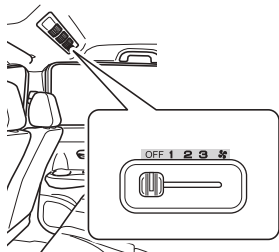  


## POWER WINDOW

 Master switch

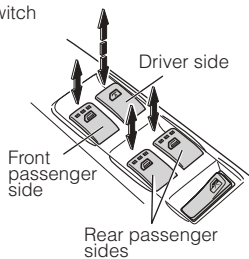

Passenger

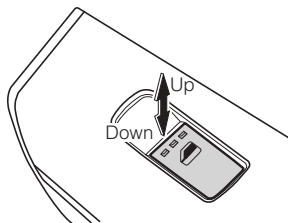 


### Automatic operation

Push the switch down or pull it completely up and release to fully open or close . To stop window partially, push the switch lightly in the opposite direction during opening or closing.

## SIDE MIRROR REMOTE CONTROL

TO ADJUST

 TO FOLD

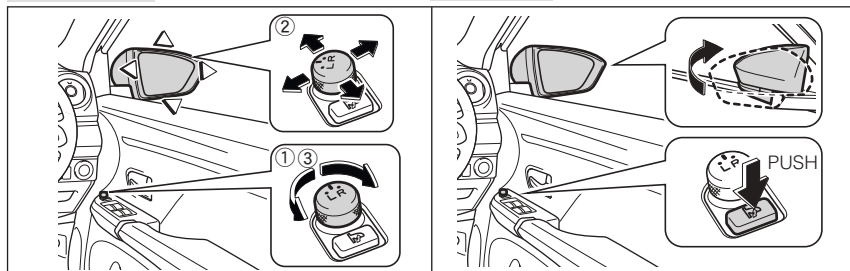


\*Ignition switch set to "ACC" or "ON" position for use.

- ① Set the switch to left or right.
- ② Push the switch to adjust the mirror.
- ③ Return the switch to neutral (OFF) position.

## POWER SOCKET

 Front

Rear

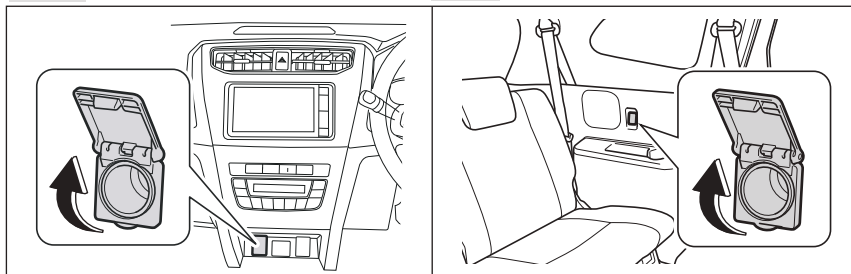


Ignition switch set to "ACC" or "ON" position for use.


## USB POWER OUTLET

 Front


Rear

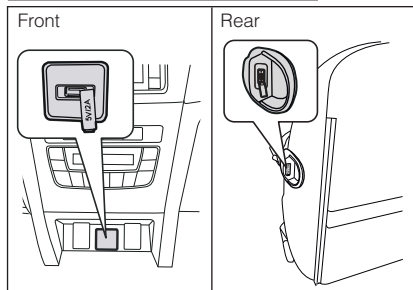


## HDMI POWER OUTLET (IF EQUIPPED)

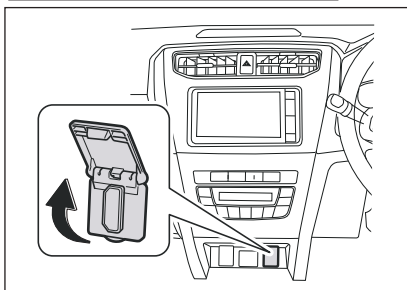 


## GLASSES CASE

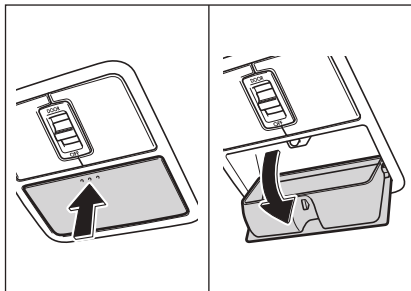 


## ROOF RAIL (IF EQUIPPED)

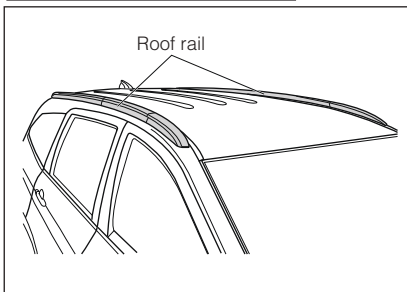 


## BUILT-IN TOLL READER

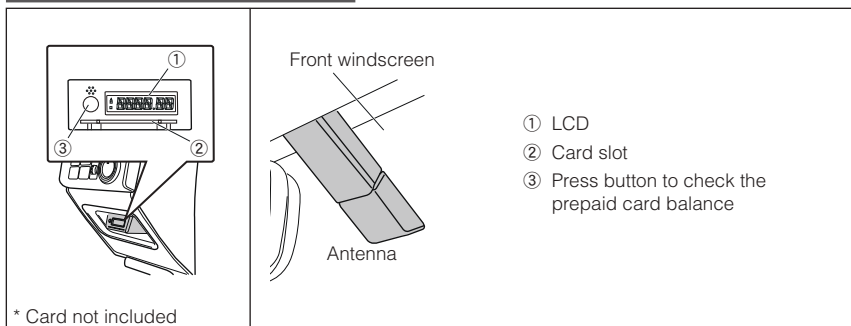 

## DVR (IF EQUIPPED)

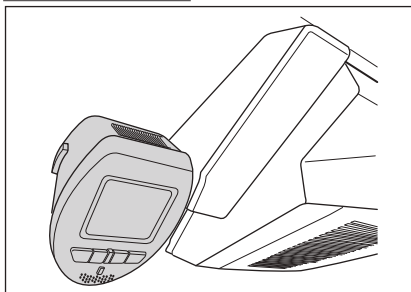 


## SEAT POCKET

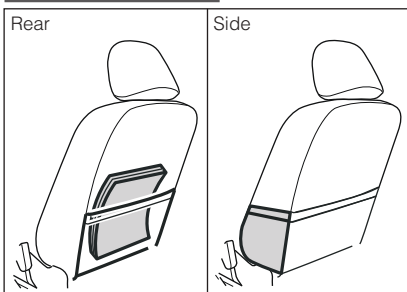 


# SAFETY & EMERGENCY

## SAFETY & EMERGENCY FEATURES

 
### DOOR LOCK

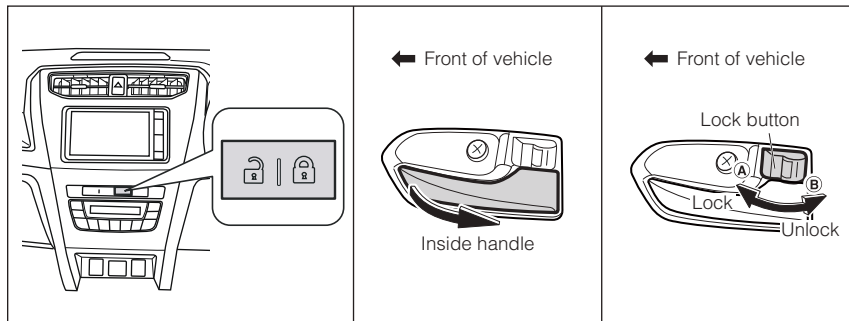


### FRONT CORNER SENSOR SWITCH

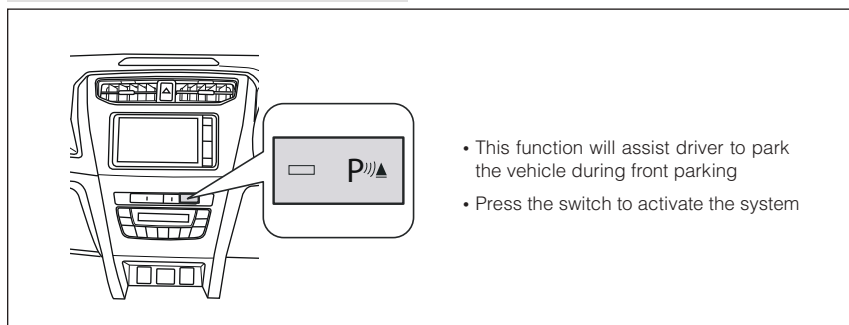 

### DOOR CHILD SAFETY LOCK

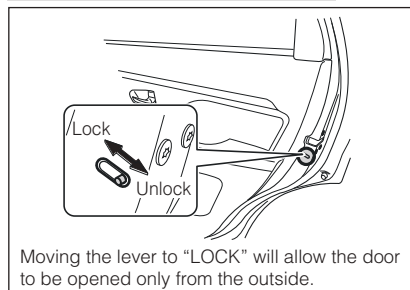 


### TILT STEERING

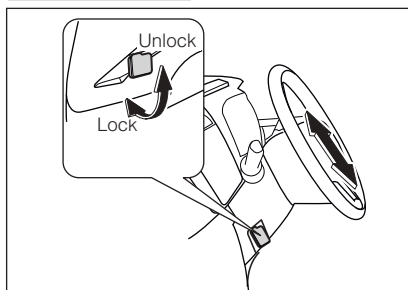 




## CHILD RESTRAINT SYSTEM

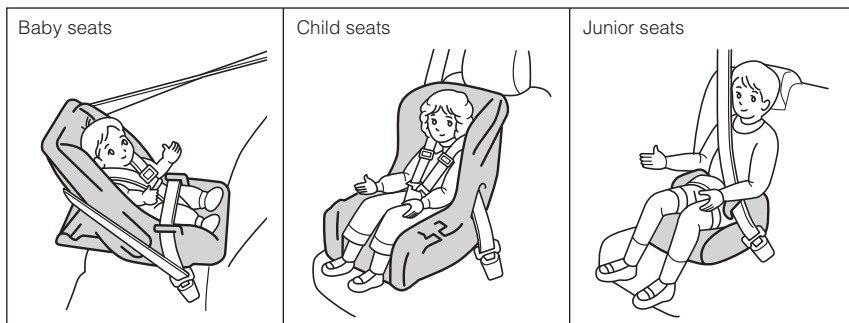 

- This vehicle is equipped with ISO FIX child restraint system seat.
- The child restraint seat should be properly installed on the rear seat.

## SEAT BELTS

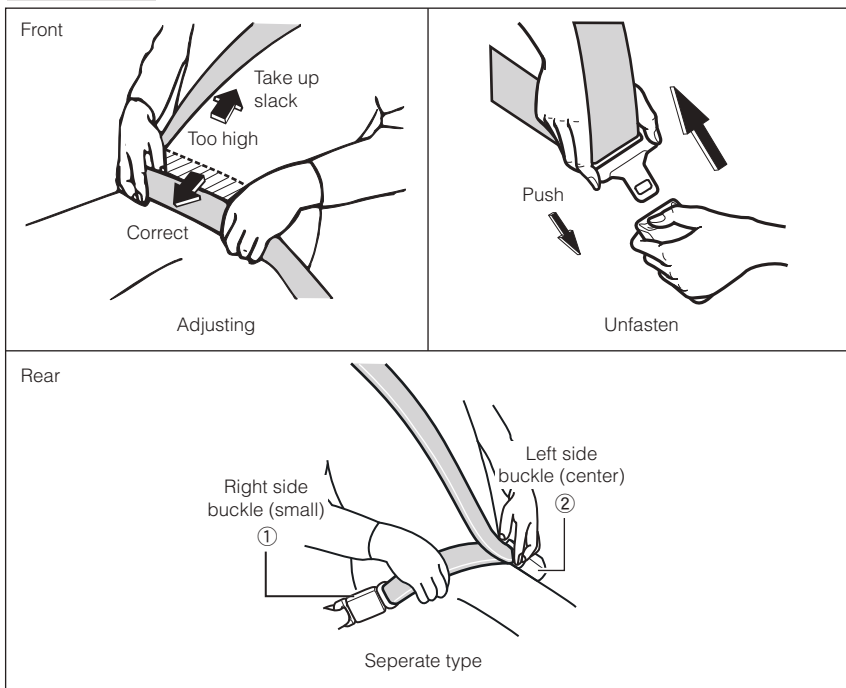 


## FRONT SEAT BELT PRETENSIONER



- Actuated when subjected to a strong impact from the front.
- Seat belt will instantly retract to secure the upper body of occupant.


## AIR BAGS
 
### SRS Front Air Bags

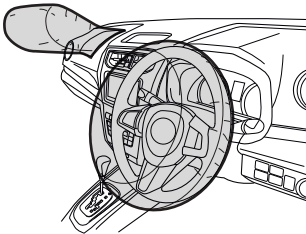


Severe impact from front of the vehicle

### SRS Side Air Bags

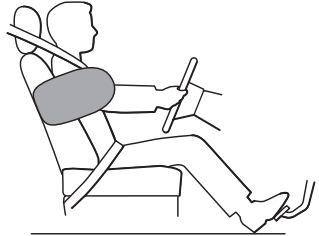 


Severe impact from side of the vehicle

### SRS Curtain Air Bags

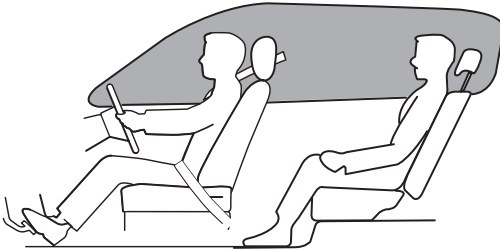 


Severe impact from side & rear of the vehicle

## TOOL BOX


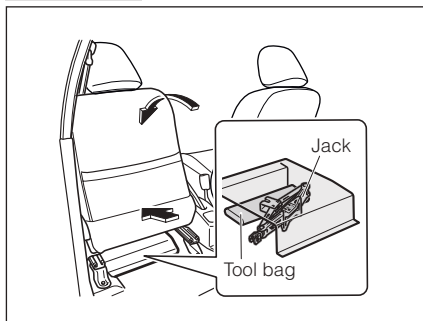 


## SPARE TYRE LOCATION

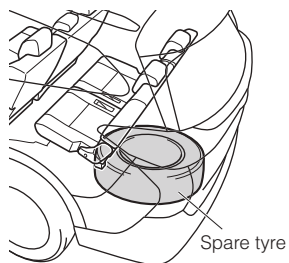 

Refer to the Owner's Manual in section 11 for tyre changing and jack positioning procedure.

## FLOOR MAT INSTALLATION

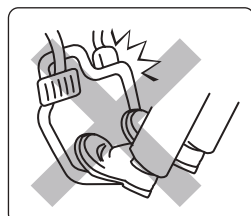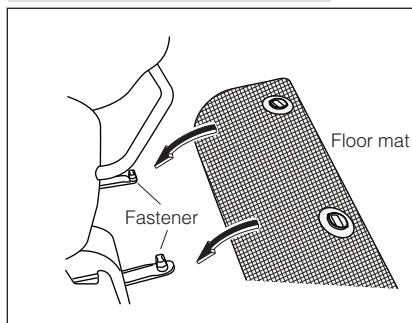  

Before driving, ensure that the floor mat is installed securely in the correct position.